FOXCONN
TLA-570A

FOXCONN
TLA-570A
FOXCONN
TLA-570A

FOXCONN
TLA-570A
ATX chassis
Tool-less chassis design
CAG 1.1/Prescott-ready
ATX & microATX motherboard capable
2 x USB 2.0 ports
Audio jacks
1 x 80mm/92mm fan (rear)





CE



Foxconn
Advancing Through Innovation
7. Expansion CARD installation instruction
1. Remove the Expansion Card Lock:



1. How to remove the bezel

1.Open the side door;

2.Press the wedge of the bezel from front panel inward and the out from front panel;

3.Rotate the bezel outward until bezel is removed from chassis;

2. Motherboard installation instruction

Place the motherboard onto MB tray and fix the motherboard with nine screws.

CD-ROM installation and take-down

1. Install two special screws onto the ODD and slide ODD along the truck;

2. Lock's moving up and down can supply two ways to fix ODD (Opt Drivers).

Push the lock down and take out ODD from driver bracket.

4. FDD installation instruction

1. Install two

2. Slide FDD





FOXCONN®
DC Brushless Fan
Model: D90SM-12
DC 12V 0.18A
MADE IN CHINA

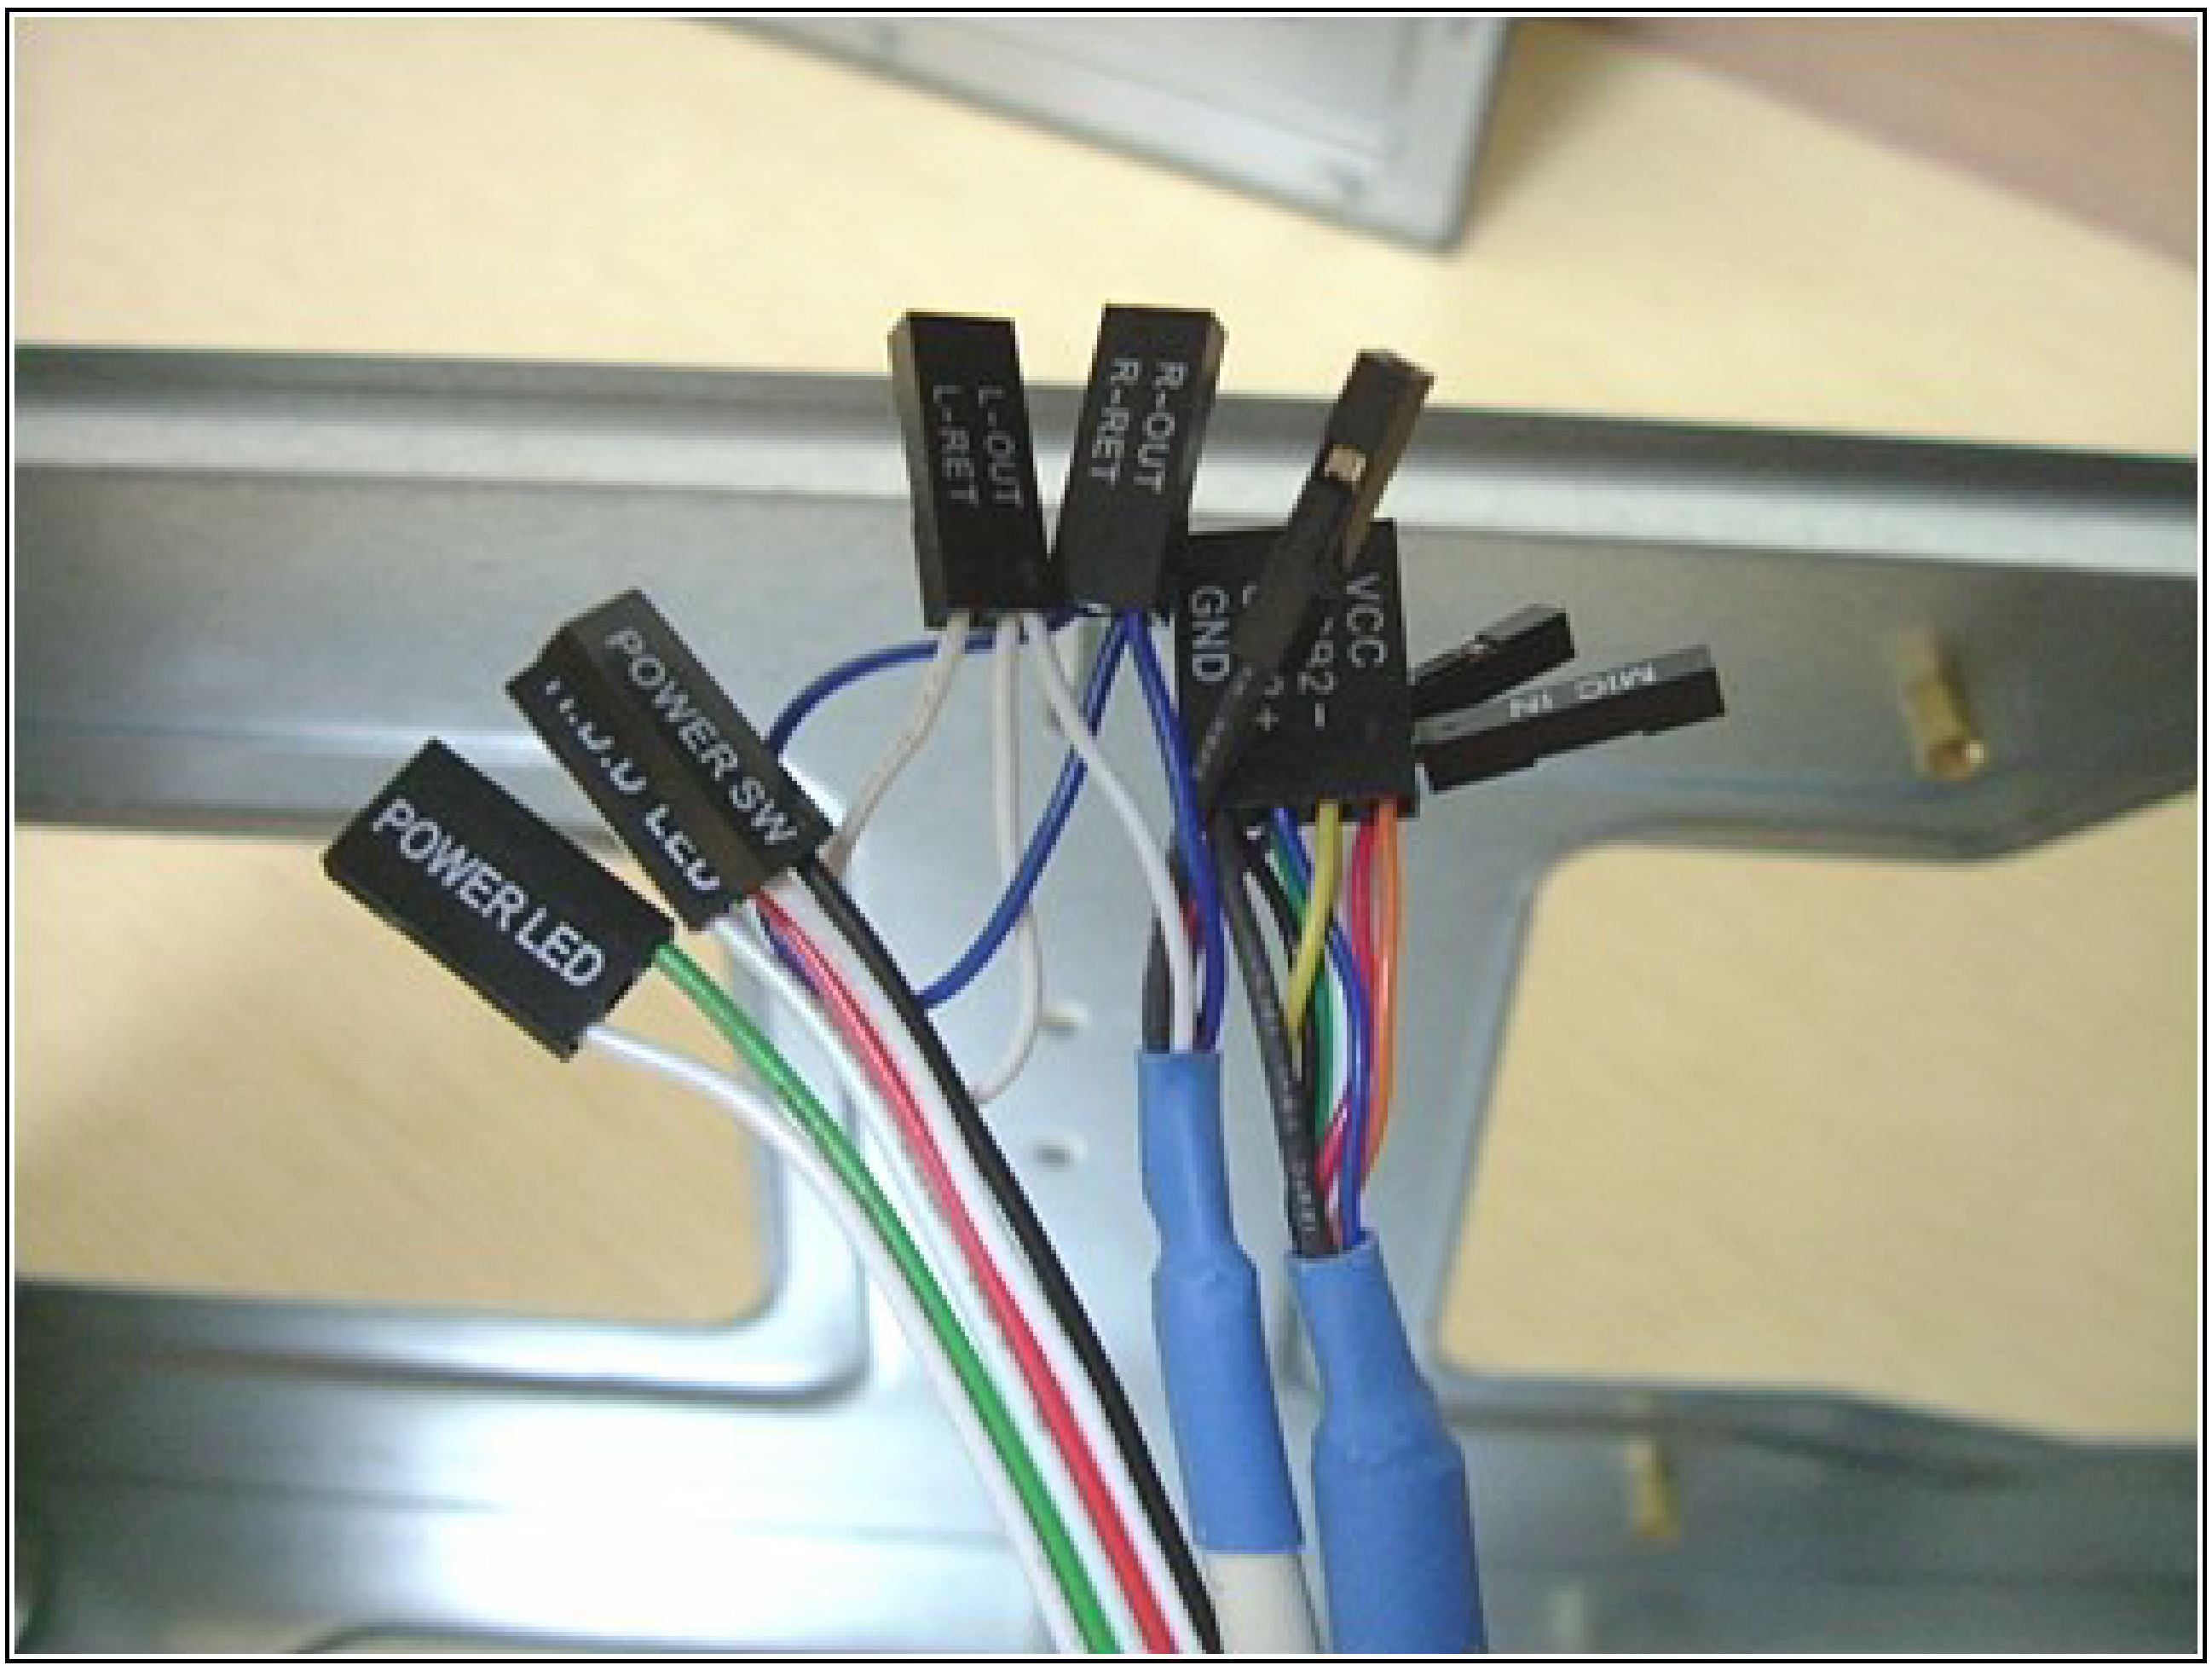
POWER LED
POWER SW
L-OUT
L-RET
R-OUT
R-RET
GND
VCC








TLA570
2Q662-010